

Voltages will vary from one restaurant location to another. There is a simple adjustment to compensate for the difference.

If an error code F03 or F04 appears when you plug in your microwave it will be necessary to complete the following:

1. Unplug the microwave.
2. Refer to the attached. Image 1 shows a cover that needs to be removed. With a Phillips screwdriver remove one screw, remove the metal plate and set aside.
3. Refer to image 2. Notice there are two plugs behind the plate.
4. With your thumb and index finger pinch the two tabs and pull the plug out of the socket.
5. Take the other plug and install it in the socket where the other was located.
6. Replace the cover.
7. Plug the microwave in the outlet.
8. Test the microwave. If a problem persists, please call me for assistance. If it is necessary to return the microwave please write a note explaining what you experienced along with your store location.

Thank You

Don

603.622.7713

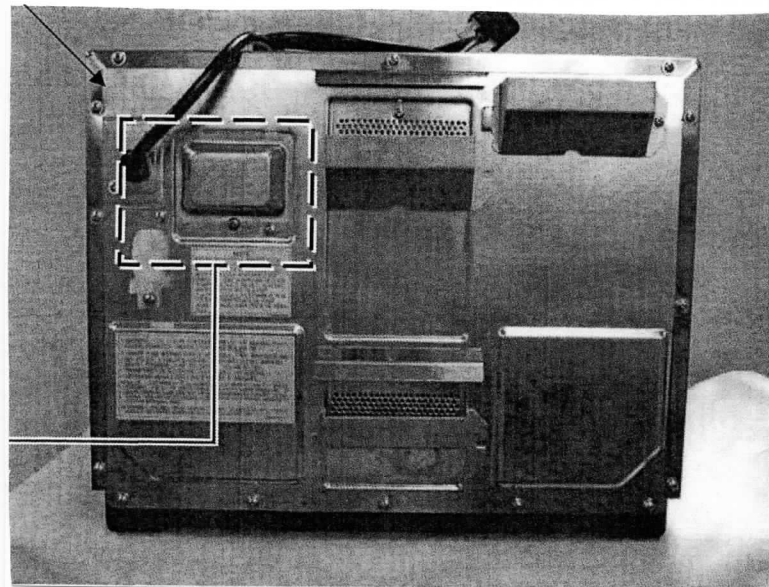


IMAGE 1

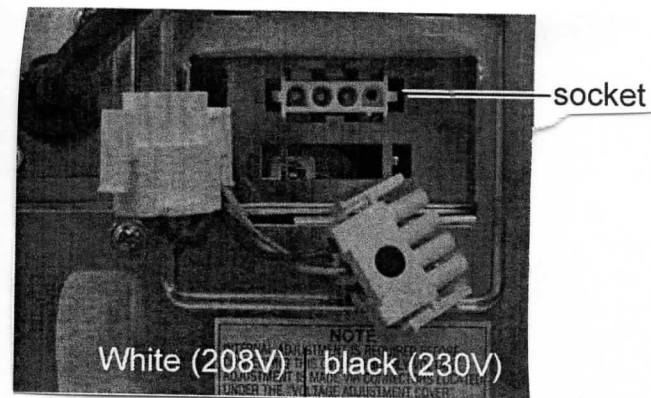


IMAGE 2